



Instruction Manual

SMOKELESS BARBEQUE GRILL



220-240V 50/60Hz 2000W

Dear Customers,

Before using your barbecue grill, read the following instructions carefully.


Make sure that the supply voltage is the same as the voltage marked on the barbecue grill.

Warning:

Never cover the grill rack with Aluminum foil, any kind of kitchenware. Etc.

Always fill the tray with water before you switch on the appliance.

The water level should preferably be kept between the min, and the max, water level marks.

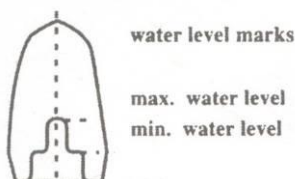

When the water level drops under the min level mark, refill the tray with water up to the max. Level. Take care not to pour water on the heating element.

The housing and the heating element get very hot in use. Be careful not to touch them while the appliance is in use or until fully cool (danger to burn yourself!)

When using the barbecue grill with stand, take care that the appliance stands stable and safe. When using the appliance as a table grill, be careful not to position it right against the wall or into a corner.

It is important that the barbecue grill is always supervised while it is in use. Do not store the barbecue grill outdoors to avoid damage through bad weather.

Make sure that no inflammable materials are adjacent to the grill. Set up the barbecue grill in a suitable heat resistant work surface.

Always carry the grill and the stand separately.

Always empty the appliance and allow it to cool before you store it.

Always switch off and disconnect the barbecue grill from the mains supply socket

1. when it is not in use
2. in the event that it malfunctions during use.
3. before cleaning

This barbecue grill is not intended for use with charcoal.

All repairs of electrical appliances should only be performed by skilled personnel.

Should the barbecue grill fail to operate or should it be damaged. Please contact the nearest authorized service centers as special tools are needed for its repair. Never attempt to repair the barbecues grill yourself.

In case the barbecue grill is operated in any manner other than described in these instructions for use. No liability will be undertaken for possible damage.

Before first use

Clean the barbecue grill and its accessories. When it is first switched on the grill may emit a new smell. A small amount of smoke may also be noticeable. We therefore recommend you to heat up the barbecue grill for about 5 minutes without any food stuffs.

How to use you barbecue grill

Fill the tray with approx 2L of Water. Take care of the min and Max water level marks.

Connect the barbecue grill in the mains supply socket and turn the thermostat knob to the highest setting (Max). The pilot light will come on. Preheat for about 5 minutes before use. When grill delicate food stuffs or for warm holding you can turn the thermostat back to a lower position and/or adjust the grill rack to the middle or upper position.

Note: the appliance is with a micro-switch, if you remove the heating tube from the appliance it will turn off automatically.

If you can't connect the appliance to the electricity, position the control setting in place and make sure the micro-switch touching tightly the edge of tray.

The water in the tray will evaporate during use. It is therefore necessary to fill up water from time to time. Be careful not to pour water pm the heating element.

When grilling is finished, turn the thermostat to "O" (OFF position) and disconnect the grill from the mains supply socket.

Cleaning and care

Before cleaning your barbecue grill, always make aware that the plug has been

removed from the mains supply socket. Allow the grill to cool down thoroughly before cleaning.

Never switch the heating element on when it is not placed onto the appliance.

Never immerse the heating element or plug in water.

Clean the heating element with a clean and dry cloth only.

Clean the grill rack and the tray with warm soapy water and dry afterwards.

Do not use harsh abrasive cleaners or a metal sponge to clean the tray.

Note:

If the supply cord is damaged. It must be replaced by the manufacturer of its service agent or a similarly qualified person in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The temperature of accessible surfaces may be high when the appliance is operating.

The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.