

142.00 mm

Preheat for about 5 minutes before use. When grill delicate food stuffs or for warm holding you can turn the thermostat back to a lower position and/or adjust the grill rack to the middle or upper position.

- The water in the tray will evaporate during use. It is therefore necessary to fill up water from time to time. Be careful not to pour water from the heating element.
- When grilling is finished, turn the thermostat to "MIN"(OFF position) and disconnect the grill from the mains supply socket.

Cleaning and care

- Before cleaning your barbecue grill, always make aware that the plug has been removed from the mains supply socket. Allow the grill to cool down thoroughly before cleaning.
- Never switch the heating element on when it is not placed onto the appliance.
- Never immerse the heating element or plug in water.
- Clean the heating element with a clean and dry cloth only.
- Clean the grill rack and the tray with warm soapy water and dry afterwards.
- Do not use harsh abrasive cleaners or a metal sponge to clean the tray.



WEEE (Waste of Electrical and Electronic Equipment),
In 2006 the European Union introduced regulations (WEEE) for the collection and recycling of all waste electrical and electronic equipment. The wheeled bin symbol shown indicates that this product must not be disposed of with household waste. Instead the product must be recycled in a manner that is environmentally friendly. For more information on how to dispose of this product, please contact your local recycling centre or your household waste disposal service. Each individual EU member state has implemented the WEEE regulations into national law in slightly different ways. Please follow your national law when you want to dispose of any electrical or electronic products.

More details can be obtained from your national WEEE recycling agency.



www.fontron.com

INSTRUCTION MANUAL ELECTRICAL BARBEQUE GRILL



Model : NJ 8006
220-240V~ 50/60Hz, 1500W


210.00 mm

Dear Customers,

Before using your barbecue grill, read the following instructions carefully. Make sure that the supply voltage is the same as the voltage marked on the barbecue grill.

Warning:

- Never cover the grill rack with Aluminium foil, any kind of kitchenware. etc.
 - Always fill the tray with water before you switch on the appliance.
- The water level should preferably be kept between the min ,and the max, water level marks.

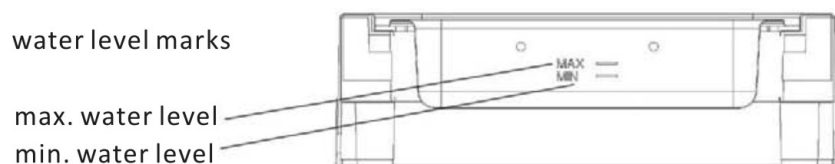

ATTENTION: Please sure the tray have been filled the water before using the appliance.

- When the water level drops under the min level mark, refill the tray with water up to the max. level. Take care not to pour water on the heating element.
- The housing and the heating element get very hot in use. Be careful not to touch them while the appliance is in use or until fully cool (danger to burn yourself!)
- When using the appliance, be careful not to position it right against the wall or into a corner.
- It is important that the barbecue grill is always supervised while it is in use. Do not store the barbecue grill outdoors to avoid damage through bad weather.
- Make sure that no inflammable materials are adjacent to the grill. Set up the barbecue grill in a suitable heat resistant work surface.
- To carry the appliance only touch the plastic handles..
- Always empty the appliance and allow it to cool before you store it.
- Always switch off and disconnect the barbecue grill from the mains supply socket
 1. when it is not in use
 2. in the event that it malfunctions during use.
 3. before cleaning
- This barbecue grill is not intended for use with charcoal.


- All repairs of electrical appliances should only be performed by skilled personnel.
- Should the barbecue grill fail to operate or should it be damaged. Please contact the nearest authorized service centers as special tools are needed for its repair. Never attempt to repair the barbecues grill by yourself.
- In case the barbecue grill is operated in any manner other than described in these instructions for use. No liability will be undertaken for possible damage.
- If the supply cord is damaged. It must be replaced by the manufacturer of it's service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

Before first use

Clean the barbecue grill and its accessories. When it is first switched on the grill may emit a new smell. A small amount of smoke may also be noticeable. We therefore recommend you to heat up the barbecue grill for about 5 minutes without any food stuffs.

How to use you barbecue grill

- Fill the tray with some water. Take care of the min and Max water level marks.
- Peg properly the heating element settings with the body as below before electrifying. .

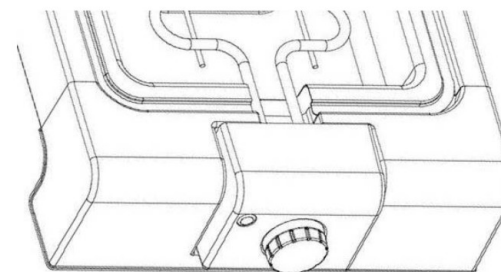

- Connect the barbecue grill in the mains supply socket and turn the thermostat knob to the highest setting(Max). the pilot light will come on.