

INSTRUCTION MANUAL

Gas Stove with Safety Device for Indoor/Outdoor use



MODEL: CA-SGB07-AU

ENGLISH
DEUTSCH
БЪЛГАРСКИ ЕЗИК

GENERAL WARNINGS

- Our society declines any responsibility connected to a wrong installation.
- Before installing and using the gas stove, please read carefully all the instructions.
- This appliance is designed for outdoor use only and must be operated away from any flammable material or surfaces & materials.
- CARBON MONOXIDE HAZARD - THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR. USING IT IN AN ENCLOSED SPACE (EG. CARAVAN, TENT, CAR, MOBILE HOME) MAY CAUSE DEATH.
- This appliance is to be stored in a dry & well ventilated location free from direct sunlight. Do not store when still connected to the cylinder. Make sure that the cylinder is disconnected and is stored in a well ventilated area, free from direct sunlight, heat and ignition sources.
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service & repair.
- If you do not follow these instructions for installation or use, you may risk some hard accidents or huge material degradations.
- Turn off the gas stove supply at the gas containers after use.
- Any modification of the appliance may be dangerous.
- KEEP OUT OF REACH OF CHILDREN!
- This appliance must be used on a non combustible surface.

IMPORTANT

- Surfaces of the appliance will become hot during operation please take care when handling or moving the appliance.
- Appliance is to be used on a stable, level, flat non-flammable surface, the appliance should be protected from direct drafts and in a well ventilated place.
- Only cooking vessels with a minimum of 250mm and a maximum of 350mm diameter are to be used with this appliance.
- Take care that the primary air intakes, located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- If you smell gas immediately turn the gas off at the cylinder and move the appliance & cylinder to a well ventilated area outside, keeping well away from sources of heat such as naked flames & pilot lights.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner & allow to cool, disengage the gas cylinder then move the appliance.
- Never use a kitchenware that is not right for the stove - especially pans with convex or concave bottom, some enamelled kitchenware, etc. The use of an unsuitable kitchenware may lead to the instability of the utensil or the stove. They could fall over and lead to fire, burn, serious injuries or death.

DANGER!

- During operation all surfaces will be extremely hot and should not be touched or handled.
- Do not use the appliance if it has a leak, worn, deteriorated or damaged seals.
- Handle with care even after brief use, always pick up using the legs not the cylinder.
- Always operate appliance a minimum of 800mm from flammable materials, walls & ceiling.
- Do not use adaptors or modify appliance to fit other connectors or cylinders.
- Do not use multiple appliances to heat a single utensil.
- Never leave appliance unattended when operating.
- Use as a cooking appliance only, is not to be used as heater or modify for any other reason.
- Avoid boil over & spills on to burners.

SPECIFICATIONS:

GB	Gas stove	Made for Fontron Ltd, Bulgaria www.fontron.com	
Model	CA-SGB07AU	Distributor: NJ Commerce Ltd, UK www.nj-commerce.co.uk	
Gas type	LPG		
	G30/31	G30	G30
Category	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)
Pressure	28-30/37mbar	30mbar	50mbar
Destination countries	BE, CH, CZ, ES, FR, GB, IE, IT, SI, SK, PT	DK, FI, BG, GR, HU, NL, NO, PT, SE, SI	AT, DE
Nominal input	8.0kW(581g/h)		
FFD	YES		


INSTALLATION:

For the assembly of the appliance the following parts are necessary:

- A butane/propane gas Bottle from 5 kg to 13 Kg.
- A low-pressure gas regulator; operating pressure: 28-30/37 mbar.
- A standard hose (max. length 1.5 m.) in compliance with relevant standard for the country of use, connected without bends, to ensure that this not subjected to twisting.
- The hose must be replaced if damaged or at least every two years.
- Check for gas leaks by spray or other suitable means (i.e. soapy water).

CONNECTION:


1. Check that the cylinder gas control is in the "OFF" position (turned fully clockwise).
2. Shut off the valve on the gas pressure regulator or the valve on the gas bottle.
3. Connect the hose to the gas regulator and to the inlet of the gas rings.
4. Firmly secure the hose to both ends with metal hose clamps.

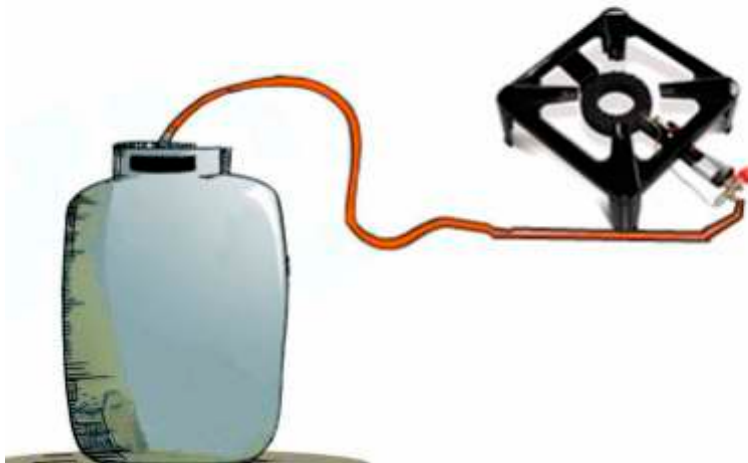

OPERATION:

- Locate the burner and gas cylinder on a horizontal surface. Avoid twisting or kinking the flexible hose and do not move the appliance during operation.
- The surfaces of the cooker become very hot during use. To prevent damage to the flexible hose, ensure the hose does not come into contact with any part of the burner. Locate the LPG cylinder & hose clear of the burner and radiant heat. During use, do not touch any area forward of the controls.
- If the burner is not operating normally, check to see if anything is obstructing the gas flow.
- DO NOT use this appliance if it is leaking, damaged or does not operate properly.

NAME OF PARTS

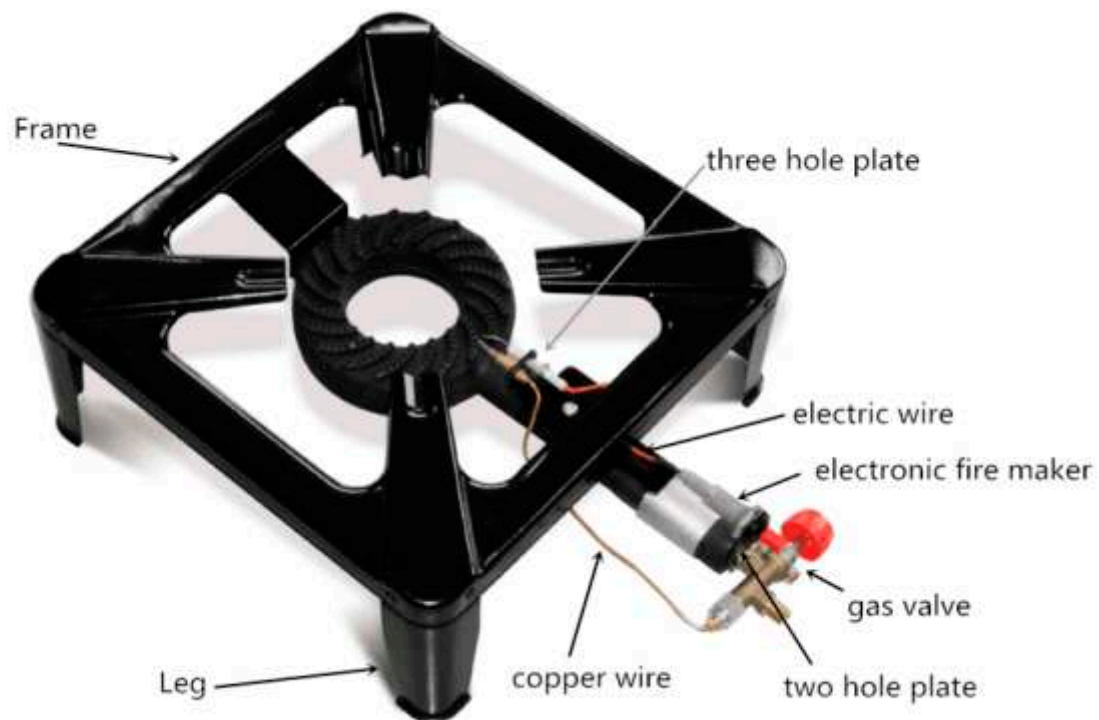

ASSEMBLY

1. Fix the burner, put the burner handle in frame, using 3 screw.
2. Install the gas valve on the burner.
3. Fix the gas hose on the gas valve

CHECKING FOR GAS LEAKS

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- NEVER check for leaks with a flame or pilot light.
- Using soapy water coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before re-testing.
- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, return to your authorised stockist for service.
- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side, if there is a sound or feel of liquid movement inside the cylinder contains gas.
- When changing gas cylinders ensure this is conducted outside in a well ventilated location free from people, animals & ignition sources such as naked flames, pilot lights & electrical equipment with heaters or elements.

LIGHTING THE BURNER

- 1. Turn on the gas supply at the cylinder.
- 2. Using a long match or gas lighter, open the control valve to release and light the burner, ensure hands are clear of the burner.
- 3. Slowly rotate the gas valve lever to high flame position.
- 4. If burner ring does not ignite, close the gas valve lever, then wait for gas to dissipate before re-attempting to light the burner.

TURNING THE BURNER OFF

- 1. Turn the gas cylinder valve off, then wait for the flame to go out.
- 2. Turn all the appliance control valves off.
- 3. Wait 5 minutes in order to cool down the stove.

Problems

Bad performance	Origin	Solution
Small flame	Weak level of gas	Change gas cylinder
Gas Stove does not turn on	Gas cylinder cold	Change gas cylinder
Windy weather condition		Use screen
Empty gas cylinder		Change gas cylinder

Made for Fontron Ltd, Bulgaria
www.fontron.com

Distributor: NJ Commerce Ltd, UK
www.nj-commerce.co.uk



DISPOSAL

Please consider our environment

- Separate the packaging materials for disposal as required by your local waste disposal regulations. Cardboard and paper belong in the waste paper collection, plastic in the recycling collection.
- When you wish to dispose of the appliance, remove the cable and dispose it in an environmentally friendly way (e.g. recycling plant).