



**GAS STOVE
FOR
OUTDOOR**

**INSTRUCTION MANUAL
NJ 01 / 02 / 03/ 04**

The designs in the figures are purely indicative. The manufacturer also reserves the right to make any modifications to the products as many be considered necessary or useful.

ENGLISH

Read instructions carefully before installation and use!


ENGLISH

Thank you for choosing our gas cooker. Please read these instructions carefully before use and keep them for future reference on how to use.

The designs in the figures are purely indicative. The manufacturer also reserves the right to make any modifications to the products as many be considered necessary or useful.

Alert! Persons with reduced physical, sensory, mental capabilities or lack of experience and knowledge, should not use the device. They must be supervised or be instructed to work with the appliance by a person responsible for their safety. Do not allow unsupervised children to use the appliance.

NAME OF PARTS

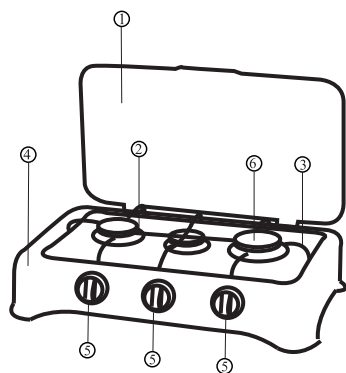

1. Top panel
2. Burner
3. Trivet
4. Housing
5. Gas control knob
and burner selection
6. Brass cap

Installation of the appliance:

- Place the appliance on a firm and leveled surface, leave at least 50 cm distance from walls. This appliance must be used in well-ventilated areas and away from any flammable materials.
- Check if the burner is placed correctly and that it is stable.
- Connect the appliance to the gas cylinder using a rubber hose (for gas), with a maximum length 1.5m.
- The rubber hose has to be changed periodically according to the regulations of the country.

- **IMPORTANT!** Always use a gas valve for propane-butane for low pressure.
- Tighten the rubber hose to the gas cylinder and to the appliance with metal brackets.
- Check if there is any gas leaks with a soapy solution (there have to be no bubbles). Never use open fire for gas leaks check. Do not use the appliance if you have not tightened the rubber hose with metal brackets.
- Place the trivets.
- Do not use the appliance if it is deformed or damaged.

How to use the appliance:

- Open the gas valve of the gas cylinder.
- Turn the knob of the desired burner anti-clockwise to start the gas supply. This model does not have automatic ignition, it has to be done manually.
- Do not move the appliance when it is operating.
- Use kitchen ware as follows:
- Small burner – pot must be with a minimum diameter of 100mm and a maximum of 140mm.
- Medium burner – pot must be with a minimum diameter of 140mm and a maximum of 220mm.
- Large Burner – pot must be with a minimum diameter of 220mm and a maximum of 220mm.

How to change the gas cylinder:

- The replacement of the gas cylinder must be done outdoors and away from flammable materials.
- Close the gas valve.
- Unscrew the gas valve from the gas cylinder.
- Before you put the gas valve on the new gas cylinder please make sure that the rubber seal is in its place and it is not damaged.
- Screw the gas valve back on the gas cylinder and make sure that it is tight.

Cleaning and Maintenance:

- We recommend that you clean the appliance with dry cloth and non-abrasive detergent.
- Clean the burner at least one time in the month. Remove the burner cap and clean. After that don't forget to place the burner cap on the burner and make sure it is tight.
- Warning:
- The cleaning and maintenance must be done after the appliance gas cooled off and the gas supply is cut from the gas valve.
- Be aware of food, water or any kind of debris that can jam the burner cap, gas holes or the gas pipes.

Repair:

- If the appliance is damaged and needs repair, please contact your dealer or a licensed specialist. Do not try to repair it by yourself.
- Be aware of food, water or any kind of debris that can jam the burner cap, gas holes or the gas pipes.

CAUTION & WARNING

- **Warning:** This appliance is increasing the amount of carbon dioxide in the area around it, which could be dangerous, that is why the appliance has to be used outdoors or in well-ventilated areas where there is adequate amount of air to insure good burning and to avoid the accumulation of unburned gases.
- **Warning:** To avoid burns, please do not touch the burner while you are lidding, or when it is in use.
- **Warning:** Do not store or use gasoline or other flammable vapors, liquids or chemicals near this nor any kind of gas appliances.
- The appliance must be installed and repaired by a licensed specialist.
- The manufacturer and its retailers will not be responsible for damage or loss of human life, due to incorrect installation or incorrect use of this appliance.

SPECIFICATIONS

Warning! This appliance shall be installed in accordance with the regulations in force and used only outdoor.
Read the instructions before installing or using this appliance.

Product	Gas stove											
Model	NJ 01			NJ 02			NJ 03			NJ 04		
Gas type	LPG			LPG			LPG			LPG		
Category	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)
Pressure	butan 28-30 mbar propan: 37 mbar	propan- butan: 30 mbar	propan- butan: 50 mbar	butan 28-30 mbar propan: 37 mbar	propan- butan: 30 mbar	propan- butan: 50 mbar	butan 28-30 mbar propan: 37 mbar	propan- butan: 30 mbar	propan- butan: 50 mbar	butan 28-30 mbar propan: 37 mbar	propan- butan: 30 mbar	propan- butan: 50 mbar
Country	GR, GB	BG, RO	DE, AT	GR, GB	BG, RO	DE, AT	GR, GB	BG, RO	DE, AT	GR, GB	BG, RO	DE, AT
Gas rated g/h	102			R102 / L 88			R 102 / M 62 / L 88			2 x 88 / 102 / 62		
Heat input kW	1,4			R 1,4 / L 1,2			R 1,4 / M 0,85 / 1,2			2 x 1,2 / 1,4 / 0,85		
Safety device	No											
Hose	Ø 9,5 mm rubber hose, max. length 1,5 m											



DISPOSAL

Please consider our environment

Separate the packaging materials for disposal as required by your local waste disposal regulations. Cardboard and paper belong in the waste paper collection, plastic in the recycling collection.

When you wish to dispose of the appliance, remove the cable and dispose it in an environmentally friendly way (e.g. recycling plant).

www.fontron-bg.com