

CE 0051 03 N. Certificato 51AT1399

THREE FEET STOVE

IMPORTANT: Read these instructions carefully for the installation and the use of the appliance.

TECHNICAL DATA

TYPE OF GAS	BUTANE G30	PROPANE G31
Pressure in mbar	28-30	30
Type of gas	I ₃₊	I ₃₊
Nozzle diameter	135	135
Normal capacity kW	8	8
Consumption	510	510

This appliance must be used outdoors.

This appliance can be used only with butane-propane.

To light the appliance to the gas cylinder:

To use only LPG cylinders.

To use only approved regulator.

The rubber tube between the appliance and regulator must be at least 1.5 M and must be changed every 5 years. The tube has to be fixed with the clamp collar on the valve.

ATTENTION

The appliance must be used outdoors and away from flammable substances.

Check that the tap is well closed turning in clockwise.

The appliance has to be used only on not inflammable surfaces.

INSTRUCTION FOR USE

- 1) Screw the regulator to the valve of the cylinder and check that the washer is well fixed.
- 2) Fix the rubber tube to the holder of the regulator and use a clamp collar.
- 3) Fix the other side of the tube to the tap of the appliance and use a clamp collar, be careful that the rubber tube is not bent.
- 4) The appliance has to be used at least 2M from flammable materials.
- 5) The cylinder must be always replaced away from any sort of heath.
- 6) The appliance is ready to be used.

INSTRUCTION FOR USE AND MAINTENANCE

Light the appliance only with matches.

- 1) Open the valve of the cylinder..
- 2) Open the gas tap of the appliance turning it in anticlockwise, place a match close to the burner, it is better to use long matches to avoid any burnings.
- 3) It is possible to regulate the flame withthe tap of the appliance.
- 4) After use, close the valve of the cylinder and tap of the appliance.

Do not put anything on the tap when you are using the appliance.

In case of leaking close the valve of the cylinder.

In case of moving hot things use protecting gloves.

Do not move the appliance during the use.

Any modification of the appliance can be dangerous and is not allowed.

MAINTENANCE

Check that there are not any insects inside the Venturi of the burner, clean it with a paintbrush.

Change the rubber tube following the limit date stamped on the tube.

Clean regularly the appliance with a steel brush.

Use the appliance only outdoors.

Do not move the appliance during the use.

Close the valve of the cylinder after use.