



# Instruction Manual

Gas stove with safety device  
Natural Gas use only

**Model NT 1 / 2 / 3**

---

The designs in the figures are purely indicative. The manufacturer also reserves the right to make any modifications to the products as many be considered necessary or useful.

 
---

ENGLISH

**FEATURES**

- High quality auto-ignition, catching fire 100% and the using life for ten years or more time.
- The whole meticulous curl make the stove body more smooth.
- Patent trivet , convenient and applicable.
- Double burner has small inner and large outer burner rings.
- Three burners including one small burner with low heater output for keeping food warm.
- Patent design burner, efficiency combustion, strong flame, less gas.
- Furnished with advanced pulse ignition and safety-system, cutting off the gas supply immediately for unexpected extinction, more safe and convenient for using.(For some items)





**NAMES OF PARTS**

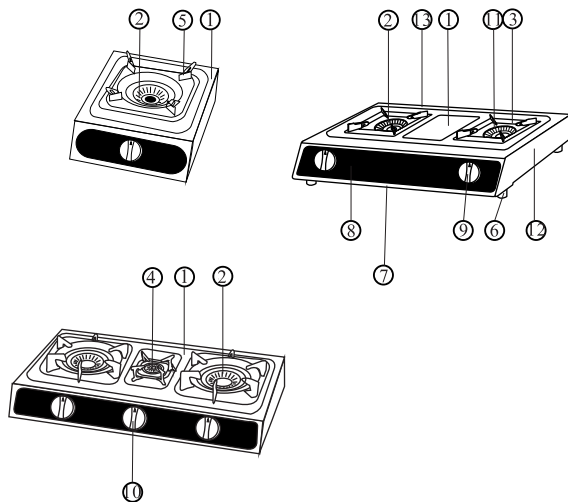

- 1.Top panel
- 2.Burner
- 3.Double burner
- 4.Small burner]
- 5.Trivet
- 6.Rubber legs
- 7.Gas control knob
- 8.Front panel
- 9.Gas control knob and burner selection
- 10.Gas control knob for small burner
- 11.Bronze cap
- 12.Side panel
- 13.Back panel

**CAUTION**

    - Do not use a gas other than that which is specified on the label attached.(Fig. 1)
- Use for cooking only. Do not dry towels, clothes, etc., over it. (Fig. 2)
- To avoid damage, do not place charcoal on the burner.
- Avoid covering the flame with a big plate which covers the gas cooker.
- Do not use the gas cooker where the flame may be blown off by the wind.
- Make sure that there are no inflammables near the gas cooker. (Fig. 3)
- While it is in use, see, from time to time, whether it burns normally.
- After use, turn the ignition knob back to OFF position and make sure the burner is put out.(Fig.4)
- When going to bed or leaving the house, be sure to turn off not only the ignition knob but also the main gas valve as well.
- The main gas valve not in use should be closed and covered by the cap.

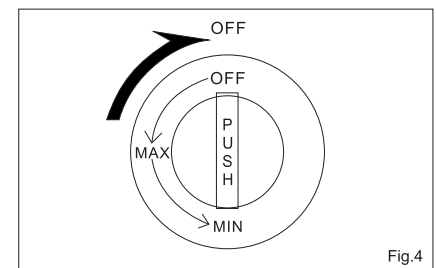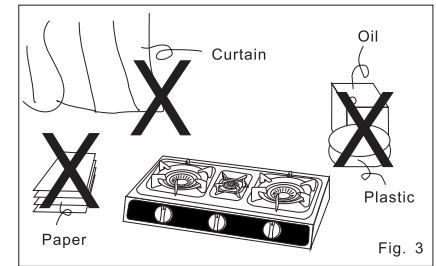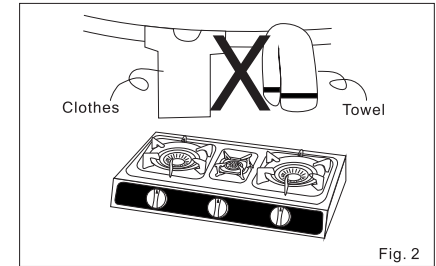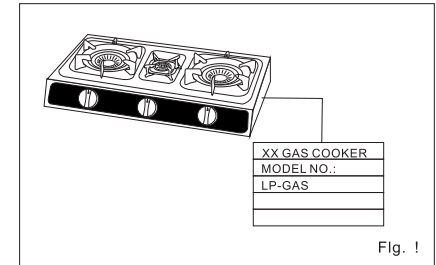

- Be careful to avoid getting burned by touching the top panel of the gas cooker, as it gets very hot near the burners when in use.
- Make sure the room is well-ventilated. Never use the gas cooker for long periods of time (over 10minutes) in a small room or in a closed-off space without the ventilation, by the ventilation fan or opening the windows.(Fig. 6)
- If a gas leak is found, close the main gas valve, open up all windows, and call your dealer. Do refrain from turning an electric switch on or off, lighting a match, or using a lighter.(Fig. 7)
- When using different kind of gas. The cooker must be renovated by professional person. Otherwise, do not use it.
- Knob is designed for anti-clockwise ignition, so that to prevent children act.
- In the event of a burn back (i.e. where the gas burns back on the jet), turn off the valve and light again. Should the problem persist take the unit back to your dealer for checking.

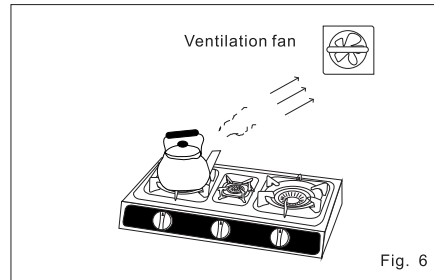 


Fig. 6

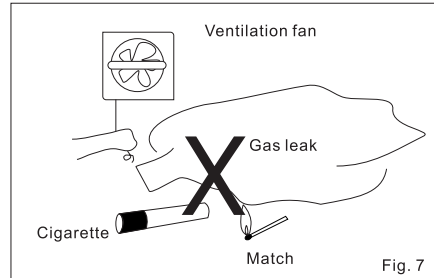 


Fig. 7

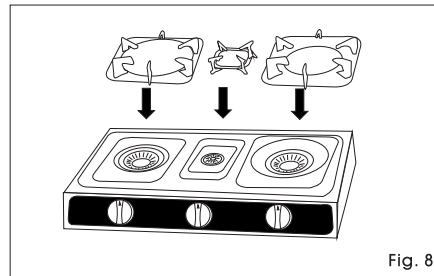 


Fig. 8

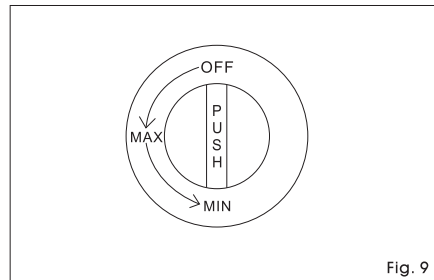 


Fig. 9

## BEFORE USE

### BEFORE USE

1. Confirm that you have the right model for your type of gas supply.
2. When unpacking, make sure that all of the parts of the gas cooker are included. Assemble the parts as show in.(Fig. 8 )
3. Place the gas control knob onto the gas cock axis and push it inwards firmly. (Fig. 9 )
4. Attach the rubber legs to the cooker by turning the cooker upside down and screwing them into the openings on the cooker bottom.(Fig. 1 1)
5. Install the burners.
6. Place the trivets on top of the burner.the trivets can be adjusted bu turning the screws and then the pan can be put on the trivets steadily.
7. When choosing a place to put the gas cooker,be sure to pick a spot that is firm and level.The gas cooker need plenty of space and air. Allow at least 15cm of space on the sides and 100cm above the unit. (Fig.12) if the space is less than 15cm from the in-flammable walls, be sure to provide a heat insulation board. Also be sure to keep paper, oil, and all other inflammable objects away from the gas cooker.

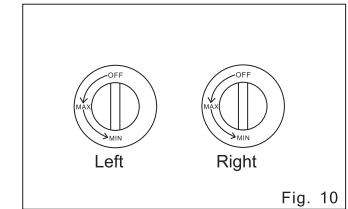 


Fig. 10

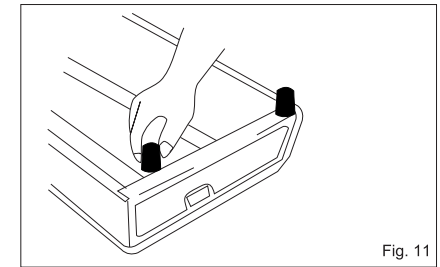 


Fig. 11

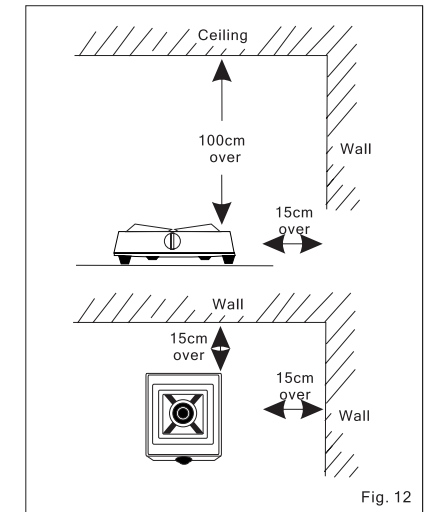 


Fig. 12

## HOW TO USE

### 1. To light the burners:

a. Open the main gas valve. push the gas control knob in and turn it towards the MAX position (counter-clockwise) until you hear the ignition click. Make sure that the burner has been lit.(Fig.13) in this position, double burner will light up both the small and large burners. To use only the small burner, release the gas control knob and turn it further to the MIN position. (Fig.14)

b. To adjust the flame size, set the gas control knob to a suitable position between MAX (full flame size) and MIN position (small flame size)

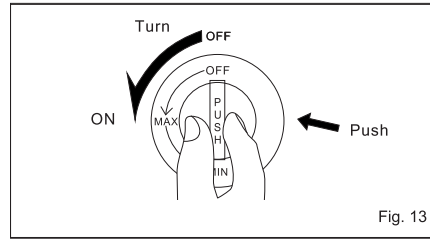 


Fig. 13

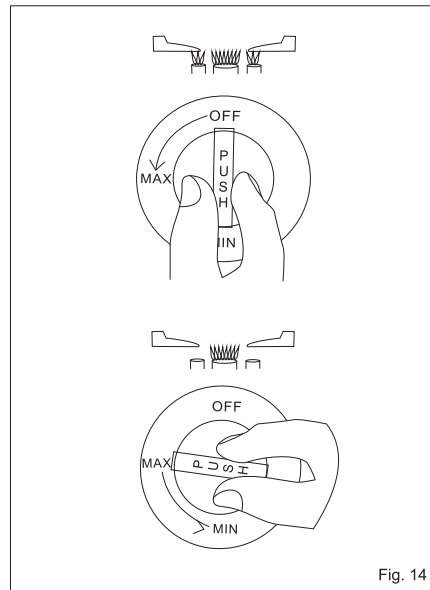 


Fig. 14

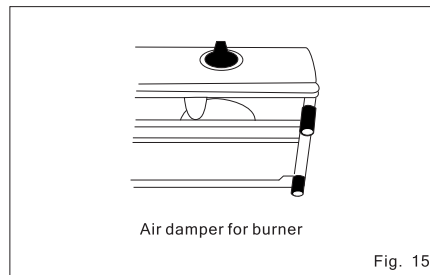 


Fig. 15

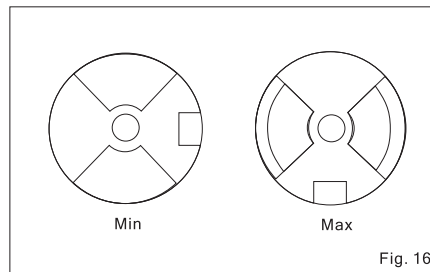 


Fig. 16

### 2. Air flow adjustment:

The burners usually need no air flow adjustment.

If they should ever burn improperly, the air flow can be controlled by adjusting the air damper inside the gas cooker (under the control knob). After the gas has been ignited, adjust the air damper until slightly rounded, vigorous blue flames appear. (Fig. 15, 16, 17)

To turn the burners off:

Turn the gas control knobs back to OFF position until you hear a click. Make sure the burner is put out and turn off the main gas valve as well.

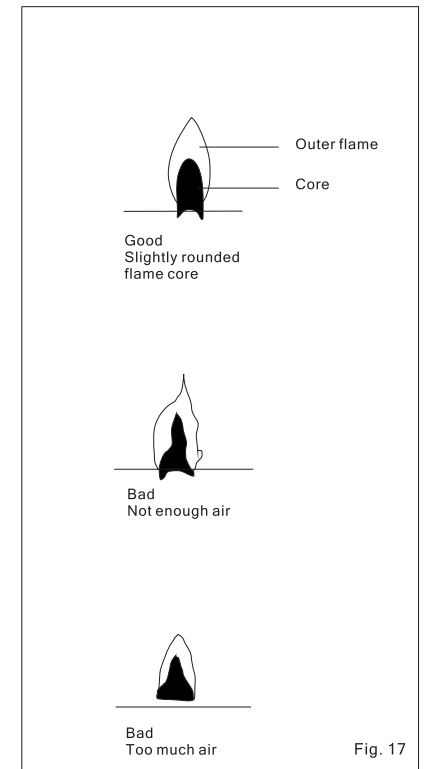 


Fig. 17

## Providing fire safety

1. Do not move the gas cooker while it is in use.
2. After use stop the gas supply from the gas valve.
3. If there is a gas leak, or if there is a scent of gas, close immediately the gas valve. Do not use appliances which can cause a spark.

**WARNING:** Do not use the gas cooker without the trivets, directly on the burners. Do not change the gas cooker's construction.

## Care and maintenance:

Before you check and care for your gas cooker, make sure to turn off the main gas valve, and wait for a period to check that the flame at the burners is down.

Check the gas hose regularly for wear or leaks. It must be replaced occasionally.

Keep it away from heater sources, and keep it clean.

Wipe the stainless steel top and body with a dry cloth. If it is difficult to clean, use soapy water and dry thoroughly with a dry cloth.

Wash the trivet in water and dry thoroughly before replacing.

The electronic ignition will not function if it is wet.

For better service and longer service life, keep the gas cooker clean.

## Warnings

If you smell gas, stop the flow of gas and call your dealer or an authorized service center.

Make sure the holes in the burner are not blocked because it can prevent ignition.

To prevent burns, keep children away from the burners in during and after their use.

It is advisable to follow the instructions of the gas company when closing tap the throttle.

Automatic ignition device should not be used to more than 15 seconds. If the burner does not ignite at this time aerate the room before trying again.

The appliance is not suitable for use by persons with mental and intellectual deviations. Nor is it advisable to use by people without experience or familiar with the instructions for use, as this endangering their safety.

Should not allow children to play with the appliance.

## Specifications

**Warning!** This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance.

Product	Gas stove					
Model	NT 1		NT 2		NT 3	
Gas type	N.G.		N.G.		N.G.	
Category	I2H	I2E	I2H	I2E	I2H	I2E
Pressure	20 mbar	20/25 mbar	20 mbar	20/25 mbar	20 mbar	20/25 mbar
Country	GR, BG, RO	DE	GR, BG, RO	DE	GR, BG, RO	DE
Gas rated g/h	291		R291/L291		R291/M65/L291	
Heat input kW	4,0		R 4,0 / L 4,0		R 4,0 / M 0,9 / 4,0	
Safety device	Yes					
Pin No.	0359CN1255					



### DISPOSAL

Please consider our environment

Separate the packaging materials for disposal as required by your local waste disposal regulations. Cardboard and paper belong in the waste paper collection, plastic in the recycling collection.

When you wish to dispose of the appliance, remove the cable and dispose it in an environmentally friendly way (e.g. recycling plant).

## After-sale service

When you find something wrong with your gas cooker, get into contact with your dealer.