

There will be a faint smoke or smell when using the appliance for the first time but this is quite normal and will fade with use.

- Wipe the dust on the surface of the appliance with the dry cloth before using;
- Make sure the plug connects well with the socket before using;
- Plug the appliance, you will hear a sound and the digital display shows "-- : --" , it means the power has been connected.
- Place the pan or pot on the surface of the heating area, touch the key "ON / OFF" to heat;
- Press the relevant button on the surface of the ceramic cooker to set your desired function: Hot pot, Soup, Fry, Timer and Child Lock;

1. unlocking the Child Lock needs you to press the button for three seconds.
 2. you can decrease the power by pressing the button "⊖" and increase the power by pressing the button "⊕" .
 3. After pressing the button "Timer", you can press the button "⊖" to decrease the time and press the button "⊕" to increase the time.
- You can lock the control panel by pressing the key "Child lock", afterwards you can unlock the control panel by pressing the key "Child lock" for three seconds.

Note:

After using the infrared cooker, press the key "ON/OFF" to turn it off, but the fan inside still works to cool the appliance for some time, you can disconnect the cooker from the power supply only after the fan stops working.

Care and Cleaning Instruction

Please ensure appliance is disconnected from the power supply and switched off before attempting any cleaning.

Please allow sufficient time for the appliance to cool down after use before plan to clean, at least 30 minutes.

The appliance is not designed to be dismantled by an unqualified technician.

Cleaning of the unit should only be attempted with slightly damp soapy cloth.

Care must be taken to ensure there that cloth is sufficiently dry to not leave any standing water.

After waiting down with the soapy cloth. Dry with a dry paper towel.

Do not use abrasive cleaning materials.

Instruction manual

Digital Double Infrared Cooker



Model No.HD6202B

220-240V~ 50Hz, 3200W

Product introduction

The infrared smoke-free digital ceramic cooker is designed according to the radiation theory of the sun, the heating wires radiate directly to the surface of the crystallite plate after being connected the power, no exhaust gas or fuel dust, it doesn't heat the air either, so the appliance is with high heating efficiency, environmental friendly and energy saving.

The best characteristic of the infrared smoke-free ceramic cooker is that the top cooking plate is made by the special crystallite glass which can resist high temp, the ingenious design of straight heating element can make the ample heat gather into the cooking section, the heating efficiency is very high, it doesn't have any radiation to people either. The appliance uses the noise-free motor to cool the surface. It is convenient, sanitary, environmental friendly and easy to operate.

Important Safeguards

When using your infrared ceramic cooker, basic safety precautions should always be followed:

- Read all instructions before using the appliance;
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired. Turn off power switch before unplug the power cord;

Close supervision is required when using this appliance near children;

- Never leave the appliance within reach of children;
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk;
- This appliance is intended for household use only and should not be used for commercial purposes.
- Do not operate the appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.
- Do not use the appliance for anything other than its intended use.
- Do not touch hot surfaces, use handle or knobs to handle.
- Ensure the appliance is used on a stable, heat resistant surface, never place the appliance near any heating appliances;
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not hang the power cord at the edge of a table or near to the hot surface;
- For the safety, please use the earthed socket for the appliance, and use separately the socket with the currency more than 10A, never use the multi-socket with other elctrical appliance(s) at the same time;

Use instruction

